


MikroMak™ Lens Setup

1. Focus the MikroMak to INFINITY (Distance of 50 ft or greater)
2. Unlock the witness mark ring and align the witness mark with the Infinity symbol ∞




3. Lock the witness mark ring (with thumb screw)

* The MikroMak lens is now set for deep focus and as you focus closer the Macro scale will align with the witness mark.

FRONT FIELD EXPANDER SETUP

**MikroMak 40mm
w/ 25mm Front Field Expander**

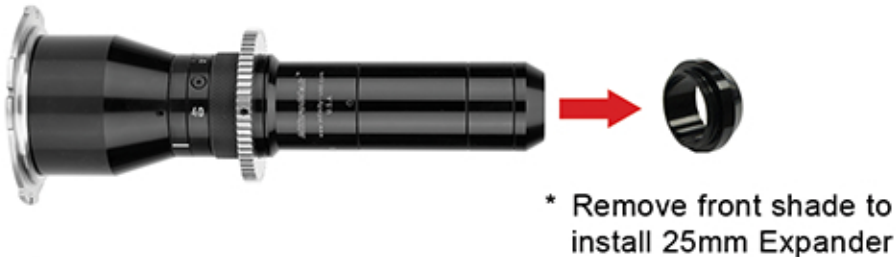

**MikroMak/RO 120mm
w/ 55mm Front Field Expander**



* When installing front field expanders, Infinity must be refocused and the Macro scale is nonviable.